

PROJOLLY SQUARE is a square corner bead profile in chromed brass or antique brass that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles, and also as separation profile for floor and wall coverings. Its particular section and elegance and the availability of special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY SQUARE

CHROMED BRASS, BRUSHED AND ANTIQUE BRASS








CHROMED BRASS thermo Packed
bar length 2,7 lm - Pack 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQSOC 045	4,5		
PJQSOC 06	6		
PJQSOC 08	8		
PJQSOC 10	10		
PJQSOC 125	12,5		



BRUSHED BRASS thermo Packed
bar length 2,7 lm - Pack 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQSOS 045	4,5		
PJQSOS 06	6		
PJQSOS 08	8		
PJQSOS 10	10		
PJQSOS 125	12,5		

PJQSOC 045 scale 1:1		H 4,5 mm
PJQSOC 06 scale 1:1		H 6 mm
PJQS...08 scale 1:1		H 8 mm
PJQS...10 scale 1:1		H 10 mm
PJQS...125 scale 1:1		H 12,5 mm

ANTIQU BRASS thermo Packed bar length 2,7 lm
Pack 20 Pcs - 54 lm (PJQSOB 125 - Pack 10 Pcs)

Article	H mm	€/lm	€/Pc
PJQSOB 08	8		
PJQSOB 10	10		
PJQSOB 125	12,5		

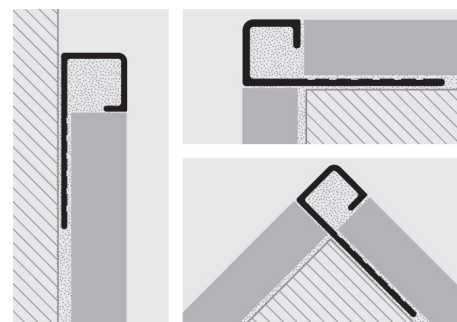
COLOURS

		
OC - Chromed brass	OB - Antique brass	OS - Brushed brass

INSTRUCTIONS FOR LAYING

1. Choose "PROJOLLY SQUARE" according to the tile thickness.
2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

EXAMPLES OF LAYING



CAPSULES, END CAPS and THREE-WAYS JOINTS

CHROMED BRASS - PLASTIC

Capsules & end caps of the on demand profiles are also on demand *

CAPSULES and END CAPS - CHROMED BRASS

Article	H mm	€/Pack 10 Pcs	€/Pack 2 Pcs
CPJQSOC .../...	045/06/08/ 10/125		
TPJQSOC .../...	045/06/08/ 10/125		

Choose the desired pack. & height
Ex.: 10 mm capsule in 10 Pcs Pack - CPJQSOS 10/10

CAPSULES and END CAPS - ANTIQUE BRASS

Article	H mm	€/Pack 10 Pcs	€/Pack 2 Pcs
CPJQSOS .../...	08/10/125		
TPJQSOS .../...	08/10/125		

Choose the desired pack. & height
Ex.: 10 mm capsule in 10 Pcs Pack - CPJQSOS 10/10

CAPSULES and END CAPS - BRUSHED BRASS

Article	H mm	€/Pack 10 Pcs	€/Pack 2 Pcs
CPJQSOS .../...	045/06/08/ 10/125		
TPJQSOS .../...	045/06/08/ 10/125		

Choose the desired pack. & height
Ex.: 10 mm capsule in 10 Pcs Pack - CPJQSOS 10/10

JOINTS - PLASTIC

Article	H mm	€/Pack 10 Pcs	€/Pack 2 Pcs
GIJQ .../...	045/06/08/ 10/125		

Choose the desired pack. & height
Ex.: 8 mm joint in 10 Pcs Pack - GIJQ 08/10

JOINT



GIJQ .../...

CAPSULE



CPJQSOC .../...

END CAP



TPJQSOC .../...

