



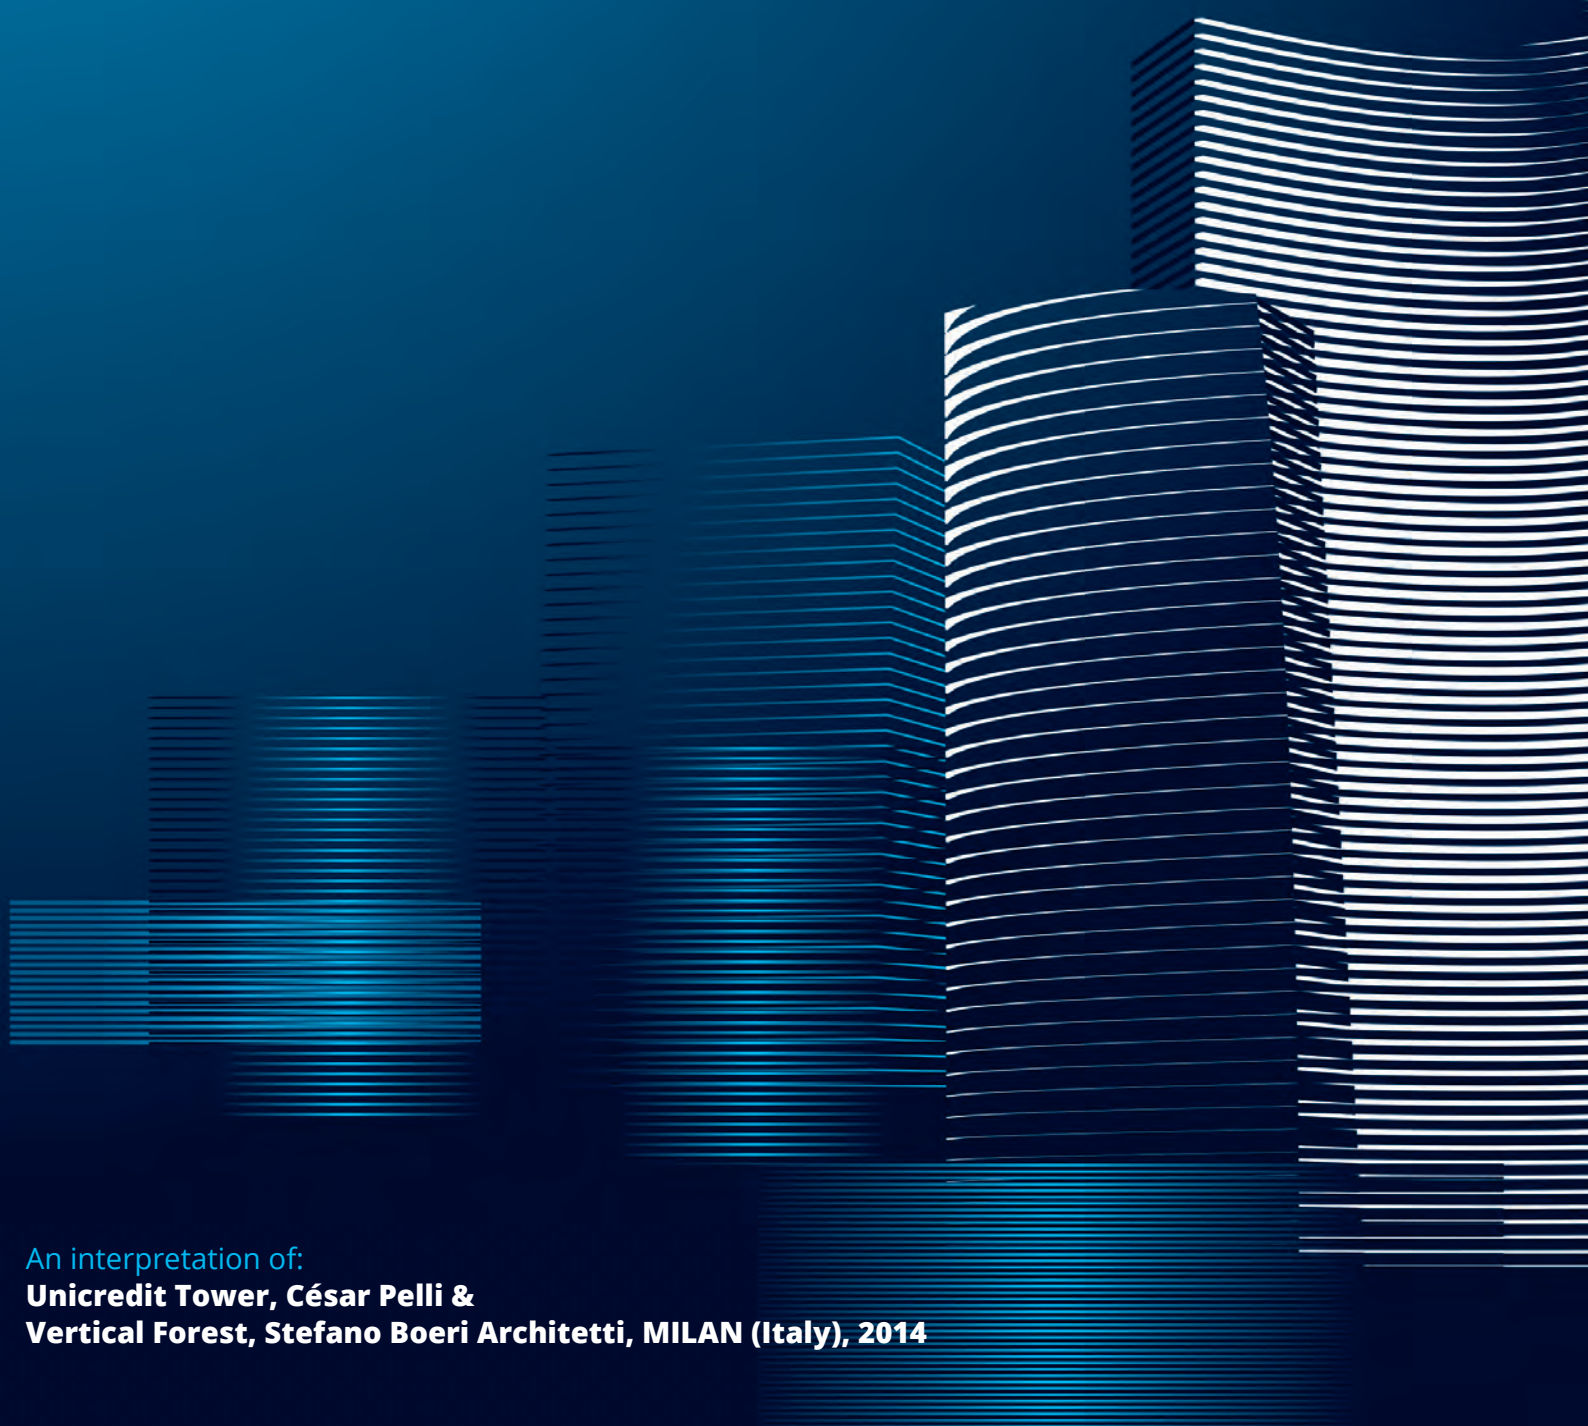

An interpretation of:
**Unicredit Tower, César Pelli &
Vertical Forest, Stefano Boeri Architetti, MILAN (Italy), 2014**


PROFILES FOR WALLS

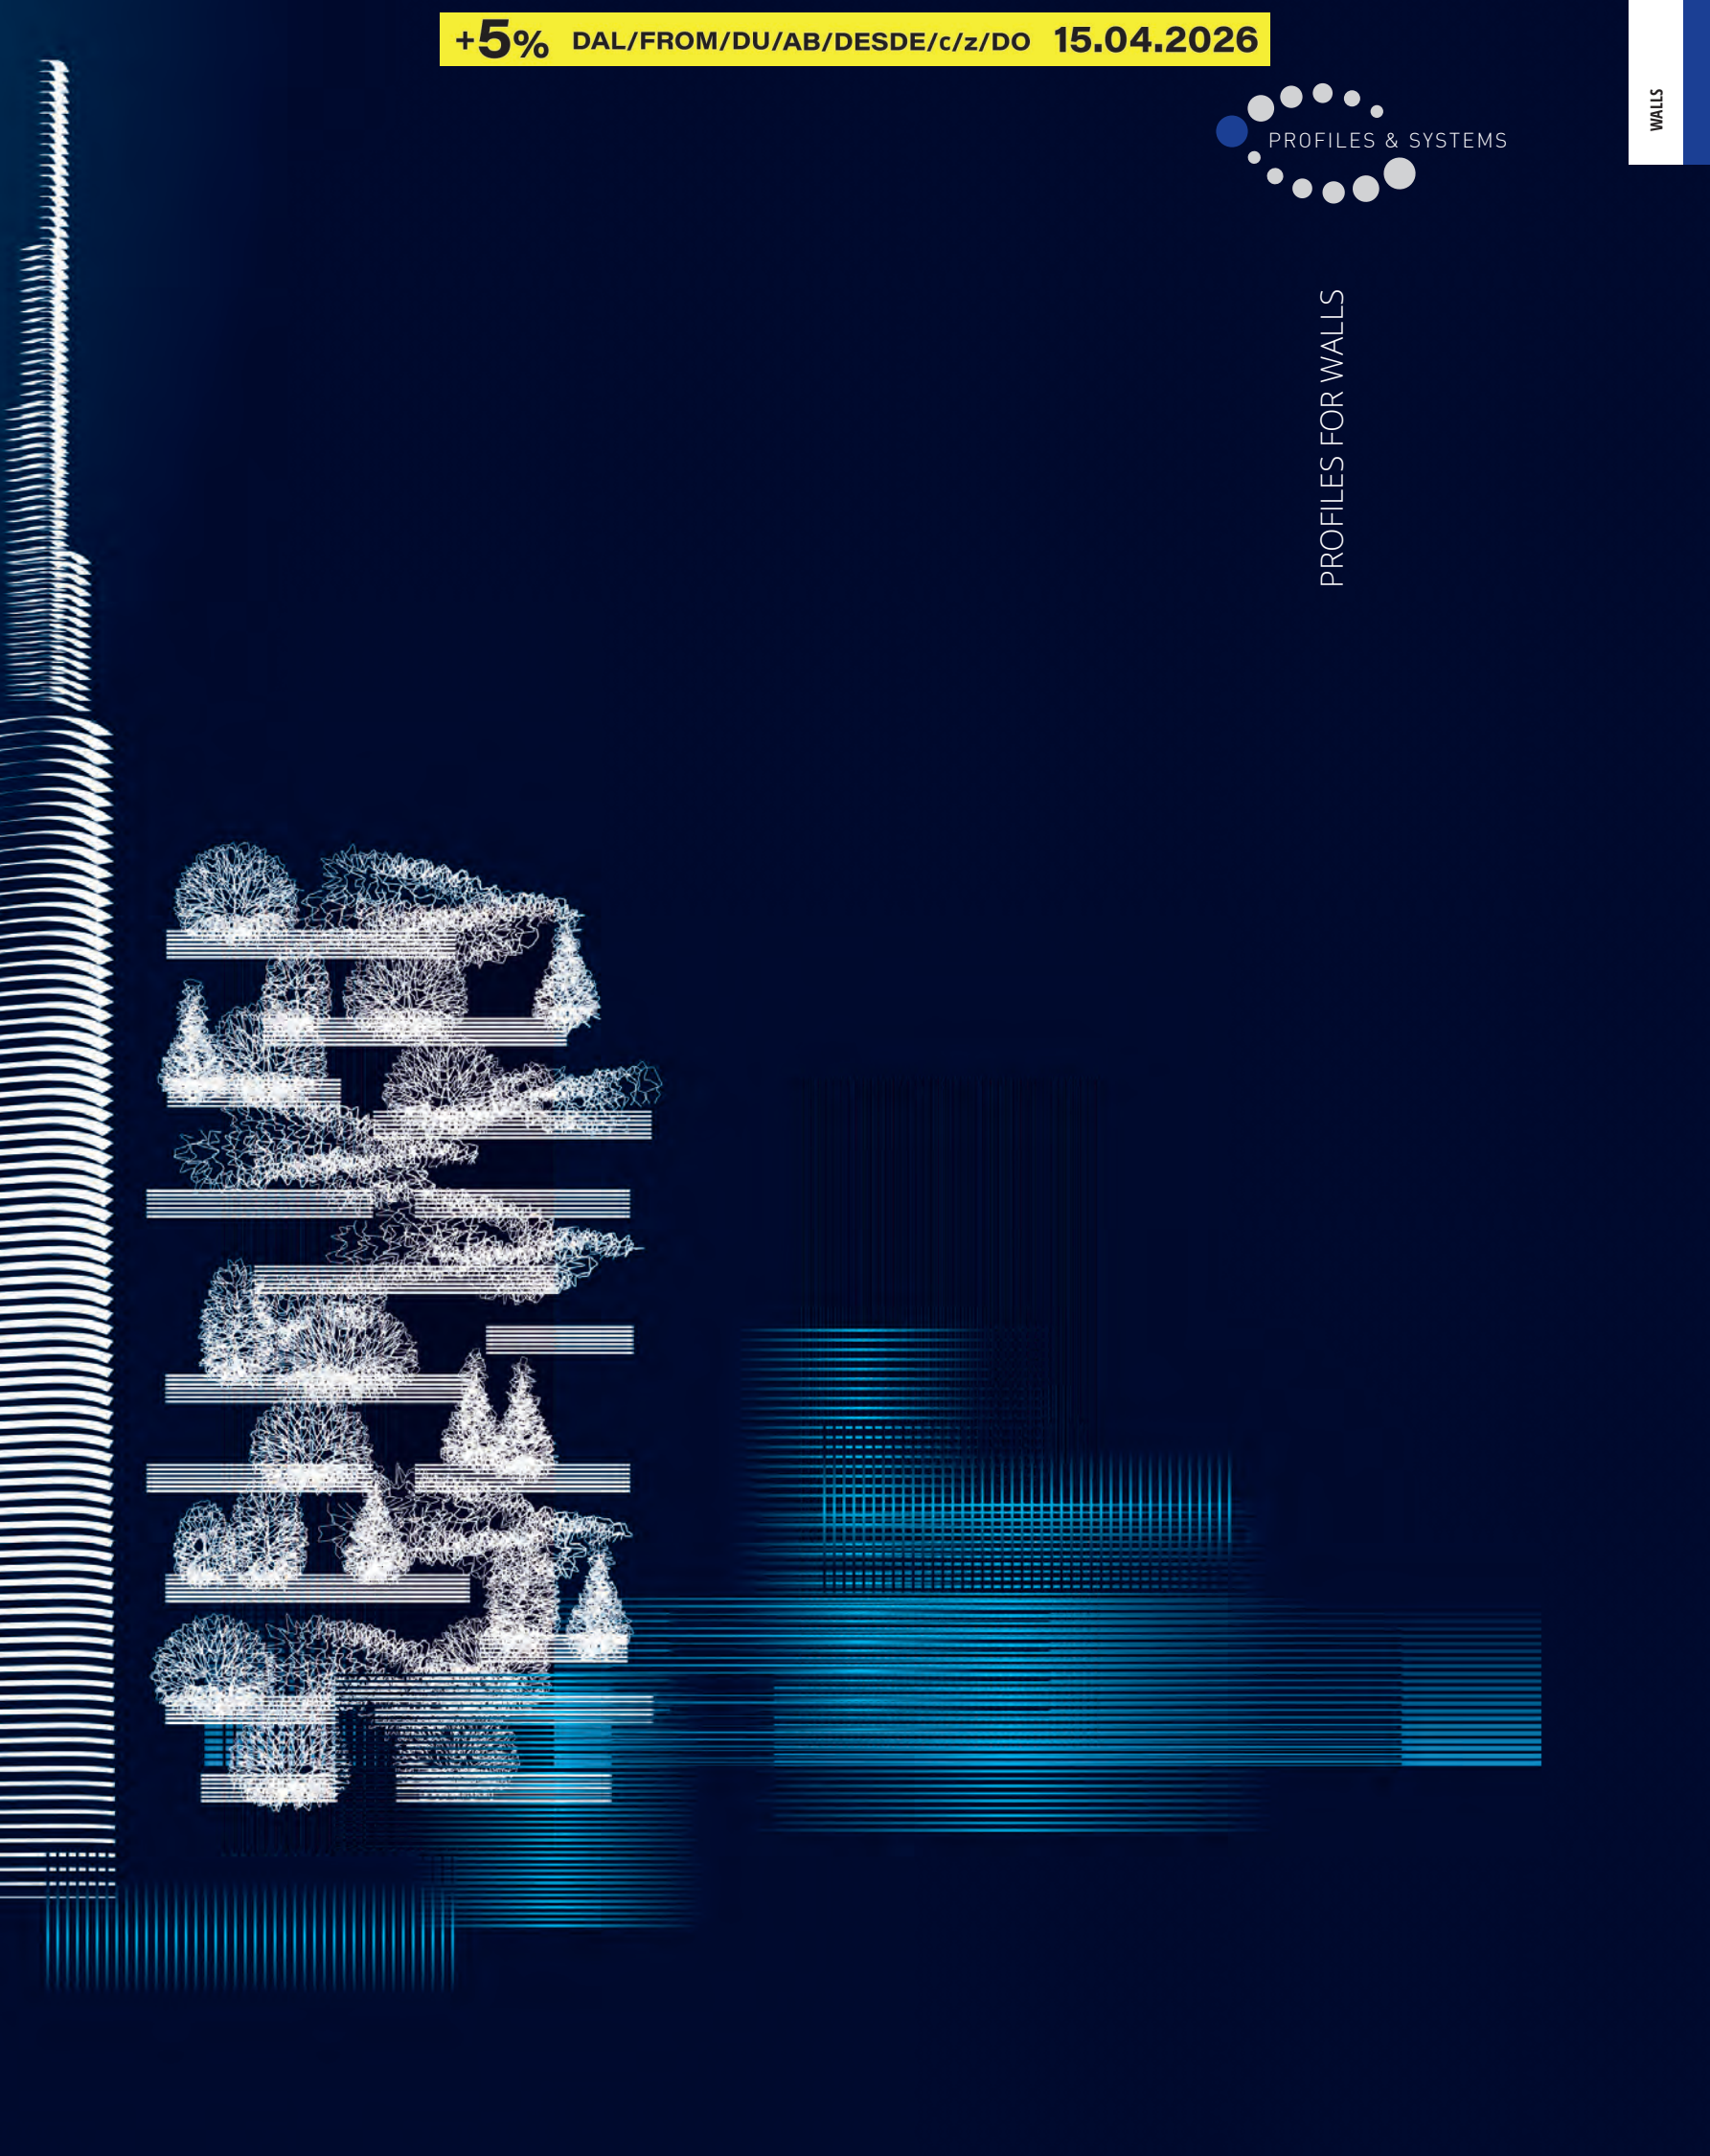

PROJOLLY SQUARE


POLISHED, SUPER POLISHED AND BRUSHED STAINLESS STEEL AISI 304/1.4301-V2A

PROJOLLY SQUARE is a square corner bead profile in polished, super polished, sanded, brushed stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles, and also as separation profile for floor and wall coverings. Its particular section, the availability in three different finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

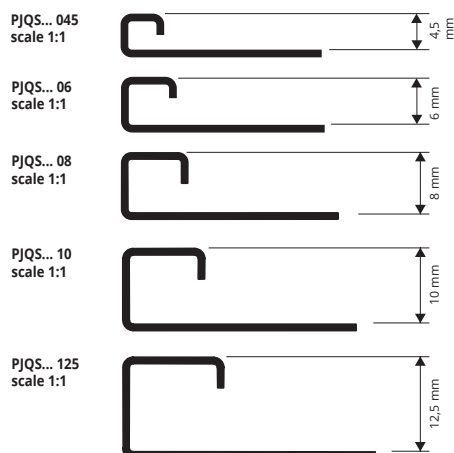

PJQSAC/S 11 & PJQSACML 11 AVAILABLE H 11 MM
PJQSAC/S 15 & PJQSACML 15 AVAILABLE H 15 MM

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

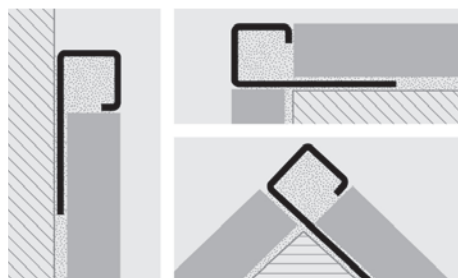

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.




POLISHED STAINLESS STEEL AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - Pack 20 Pcs - 54 lm (H 4,5 - 108 lm) - 8/10 mm

Article	H mm	€/lm	€/Pc
PJQSAC 045	4,5	9,87	26,65
PJQSAC 06	6	10,38	28,03
PJQSAC 07	7	10,68	28,84
PJQSAC 08	8	11,00	29,70
PJQSAC 09	9	11,28	30,46
PJQSAC 10	10	11,59	31,29
PJQSAC 11	11	12,04	32,51
PJQSAC 125	12,5	12,25	33,08
PJQSAC 15	15	13,35	36,05

SUPER POLISHED STAINLESS STEEL AISI 304/1.4301-V2A
thermo Packed
bar length 2,7 lm - Pack 20 Pcs - 54 lm - 8/10 mm

Article	H mm	€/lm	€/Pc
PJQSACML 08	8	15,07	40,69
PJQSACML 10	10	16,45	44,42
PJQSACML 11	11	16,77	45,28
PJQSACML 125	12,5	17,04	46,01

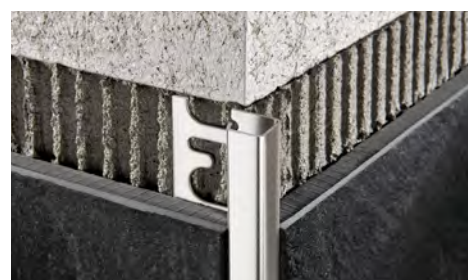


Brushed STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - Pack 20 Pcs - 54 lm (H 4,5 - 108 lm) - 8/10 mm

Article	H mm	€/lm	€/Pc
PJQSACS 045	4,5	11,44	30,89
PJQSACS 06	6	12,04	32,51
PJQSACS 07	7	13,28	35,86
PJQSACS 08	8	14,53	39,23
PJQSACS 09	9	14,90	40,23
PJQSACS 10	10	15,26	41,20
PJQSACS 11	11	15,52	41,90
PJQSACS 125	12,5	15,92	42,98
PJQSACS 15	15	16,91	45,66

COLOURS



AC - Polished S.S. AISI 304/1.4301-V2A ACML - Super pol. S.S. AISI 304/1.4301-V2A



ACS - Brushed s.s. AISI 304/1.4301-V2A

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED, SUPER POLISHED, SATIN FINISH ST. STEEL AISI 304/1.4301-V2A / PLASTIC

CAPSULES and END CAPS - POLISHED STAINLESS STEEL AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJQSAC .../1	045/06/07/08/09/10/11/125/15	16,43
TPJQSAC .../1	045/06/07/08/09/10/11/125/15	3,32

Choose the desired height
Ex.: 4,5 mm capsule in 1 Pcs Pack - CPJQSAC 045/1

CAPSULES AND END CAPS - BRUSHED STAINLESS ST. AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJQSACS .../1	045/06/07/08/09/10/11/125/15	18,44
TPJQSACS .../1	045/06/07/08/09/10/11/125/15	3,32

Choose the desired height
Ex.: 4,5 mm capsule in 1 Pcs Pack - CPJQSACS 045/1


CAPSULES - SUPER POLISHED STAINLESS STEEL AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJQSACML .../1	08/10/125	20,46
TPJQSACML .../1	08/10/125	3,02

Choose the desired height
Ex.: 4,5 mm capsule in 1 Pcs Pack - CPJQSACML 045/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	045/06/07/08/09/10/11/125/15	3,08

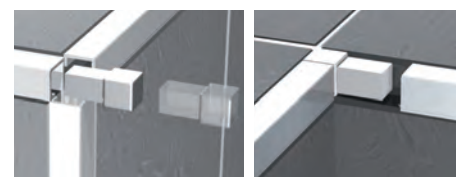

JOINT

CAPSULE

END CAP




GIJQ ...



CPJQS... .../1



TPJQS... .../1



PROJOLLY SQUARE is a square corner bead profile in polished stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles, and also as separation profile for floor and wall coverings. Its particular section and the availability of special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

PROJOLLY SQUARE

POLISHED, BRUSHED STAINLESS STEEL
AISI 316LL/1.4404-V4A



POLISHED STAINLESS STEEL AISI 316LL/1.4404-V4A
with protective film

bar length 2,7 LM - Pack 20 Pcs - 54 lm - 8/10 mm



Article	H mm	€/lm	€/Pc
PJQSACM 08	8	14,28	38,56
PJQSACM 10	10	15,05	40,64
PJQSACM 125	12,5	15,91	42,96

COLOURS



ACM - Polished stainless st.
AISI 316LL




BRUSHED STAINLESS STEEL AISI 316LL/1.4404-V4A
with protective film

bar length 2,7 LM - Pack 20 Pcs - 54 lm - 8/10 mm



Article	H mm	€/lm	€/Pc
PJQSACMS 10	10	19,56	52,81
PJQSACMS 125	12,5	20,68	55,84

COLOURS



ACMS - Brushed stainless st.
AISI 316LL

PJQSACM 08
scale 1:1



PJQS... 10
scale 1:1



PJQS... 125
scale 1:1



INSTRUCTIONS FOR LAYING METHODS

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

CAPSULES, END CAPS and THREE-WAYS JOINTS

STAINLESS STEEL AISI 316LL

CAPSULES and END CAPS - POLISHED STAINLESS STEEL AISI 316LL/1.4404

Article	H mm	€/Pc
CPJQSACM .../1	08/10/12,5	21,31
TPJQSACM .../1	08/10/12,5	3,94

Choose the desired height

Ex.: 10 mm capsule in 1 Pcs PACMk - CPJQSACM 10/1

CAPSULES and END CAPS - BRUSHED STAINLESS STEEL AISI 316LL/1.4404


Article	H mm	€/Pc
CPJQSACMS .../1	10/125	21,31
TPJQSACMS .../1	10/125	3,94

Choose the desired height

Ex.: 10 mm capsule in 1 Pcs PACMk - CPJQSACMS 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	08/10/125	3,08



TPJQSACM .../1

CPJQSACM .../1

GIJQ ...





PROJOLLY SQUARE is a square corner bead profile in chromed brass or antique brass that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles, and also as separation profile for floor and wall coverings. Its particular section and elegance and the availability of special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY SQUARE

CHROMED BRASS, BRUSHED AND ANTIQUE BRASS




CHROMED BRASS thermo Packed
bar length 2,7 lm - Pack 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQSOC 045	4,5	21,48	58,00
PJQSOC 06	6	24,50	66,15
PJQSOC 08	8	28,97	78,22
PJQSOC 10	10	30,93	83,51
PJQSOC 125	12,5	32,06	86,56



BRUSHED BRASS thermo Packed
bar length 2,7 lm - Pack 20 Pcs - 54 lm


Article	H mm	€/lm	€/Pc
PJQSOS 06	6	16,60	44,82
PJQSOS 10	10	18,14	48,98
PJQSOS 125	12,5	20,12	54,32

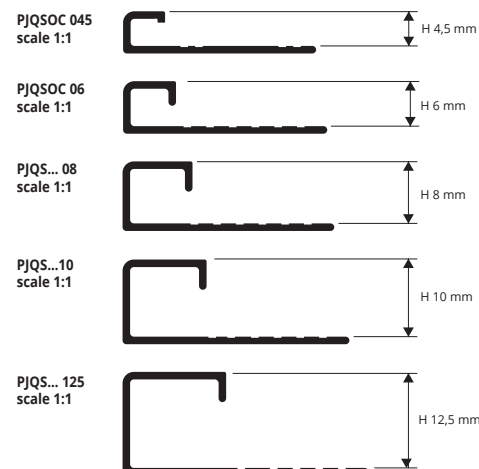

ANTIQU BRASS thermo Packed bar length 2,7 lm
Pack 20 Pcs - 54 lm (PJQSOB 125 - Pack 10 Pcs)

Article	H mm	€/lm	€/Pc
PJQSOB 08	8	36,59	98,79
PJQSOB 10	10	39,74	107,30
PJQSOB 125	12,5	41,93	113,21


COLOURS



INSTRUCTIONS FOR LAYING

1. Choose "PROJOLLY SQUARE" according to the tile thickness.
2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

EXAMPLES OF LAYING

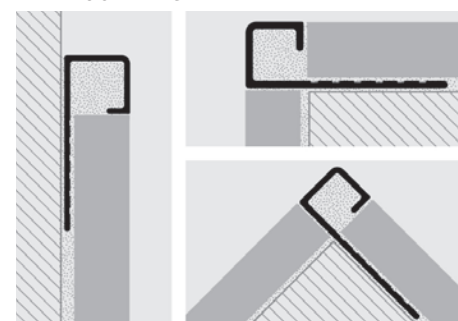

CAPSULES, END CAPS and THREE-WAYS JOINTS

CHROMED BRASS, BRUSHED AND ANTIQUE BRASS - PLASTIC

CAPSULES and END CAPS - CHROMED BRASS

Article	H mm	€/Pc
CPJQSOC .../1	045/06/08/10/125	17,53
TPJQSOC .../1	045/06/08/10/125	4,38

Choose the desired height

Ex.: 10 mm capsule in 1 Pcs Pack - CPJQSOS 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	045/06/08/10/125	3,08

CAPSULES and END CAPS - ANTIQUE BRASS

Article	H mm	€/Pc
CPJQSOB .../1	08/10/125	22,58
TPJQSOB .../1	08/10/125	4,38

Choose the desired height


Ex.: 10 mm capsule in 1 Pcs Pack - CPJQSOB 10/1

CAPSULES and END CAPS - BRUSHED BRASS

Article	H mm	€/Pc
CPJQSOS .../1	06/10/125	23,00
TPJQSOS .../1	06/10/125	4,38

Choose the desired height


Ex.: 10 mm capsule in 1 Pcs Pack - CPJQSOS 10/1

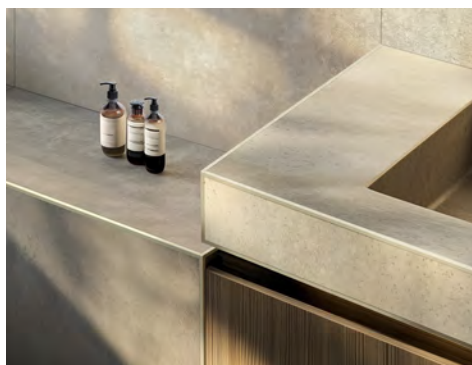

PROJOLLY SQUARE

ANODIZED ALUMINIUM

PROJOLLY SQUARE is a square corner bead profile in anodized and polished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles and also as separation profile for floor and wall coverings. Its particular section and elegance, the availability in numerous finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows an elegant workmanlike application.

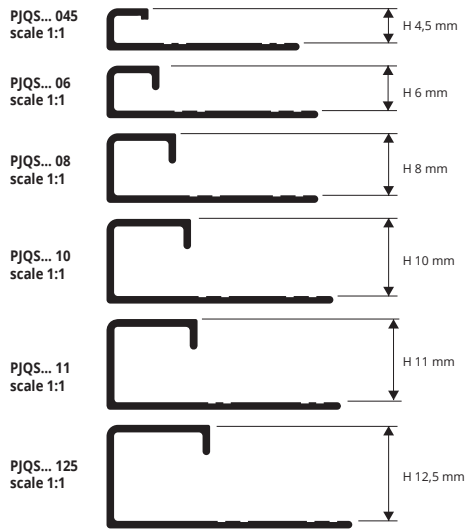

ANODIZED ALUMINIUM thermo Packed (silver-gold-copper-titanium)
 bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)


Article	H mm	€/lm	€/Pc
PJQSAA 045	4,5	5,71	15,42
PJQSAA 06	6	5,81	15,69
PJQSAA 08	8	5,85	15,80
PJQSAA 10	10	6,28	16,96
PJQSAA 11	11	6,79	18,33
PJQSAA 125	12,5	7,18	19,39
PJQSAO 10	10	7,25	19,58
PJQSAO 125	12,5	8,01	21,63
PJQ SAR 08	8	8,01	21,63
PJQ SAR 10	10	8,43	22,76
PJQ SAR 125	12,5	8,99	24,27
PJQSAT 045	4,5	6,09	16,44
PJQSAT 06	6	6,43	17,36
PJQSAT 08	8	6,71	18,12
PJQSAT 10	10	7,25	19,58
PJQSAT 11	11	7,66	20,68
PJQSAT 125	12,5	8,01	21,63
PJQSAB 10	10	8,49	22,92
PJQSAB 125	12,5	9,69	26,16



ANODIZED ALUMINIUM thermo Packed (black-grey gun)
 bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSNEO 06	6	7,74	20,90
PJQSNEO 08	8	8,01	21,63
PJQSNEO 10	10	8,43	22,76
PJQSNEO 11	11	8,76	23,65
PJQSNEO 125	12,5	8,99	24,27
PJQSAG 08	8	7,42	20,03
PJQSAG 10	10	7,93	21,41
PJQSAG 125	12,5	8,76	23,65

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

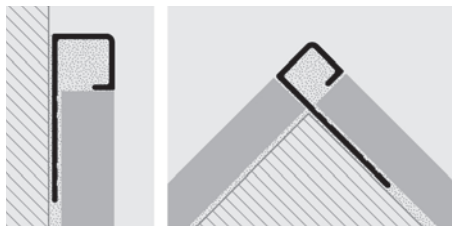

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

ANODIZED					
AA - Anod. silver alum.	AO - Anod. gold alum.	AR - Anod. copper alum.	AT - Anod. titanium alum.	AB - Anodized bronze alum.	NEO - Anod. black alum.
AG - Anod. grey gun alum.					

CAPSULES, END CAPS and THREE-WAYS JOINTS

ANODIZED ALUMINIUM / PLASTIC

CAPSULES and END CAPS - ANODIZED ALUMINIUM

Article	H mm	€/Pc
CPJQSAA .../1	045/06/08/10/11/125	7,04
TPJQSAA .../1	045/06/08/10/11/125	3,32
CPJQSAO .../1	10/125	7,71
TPJQSAO .../1	10/125	3,32
CPJQ SAR .../1	08/10/125	7,71
TPJQ SAR .../1	08/10/125	3,32
CPJQSAT .../1	045/06/08/10/11/125	7,71
TPJQSAT .../1	045/06/08/10/11/125	3,32
CPJQSNEO .../1	06/08/10/11/125	10,37
TPJQSNEO .../1	06/08/10/11/125	3,32

CPJQSAG .../1	08/10/125	7,71
TPJQSAG .../1	08/10/125	3,32
CPJQSAB 10/1	10	7,71
TPJQSAB 10/1	10	3,32
CPJQSAB 125/1	125	7,71
TPJQSAB 125/1	125	3,32

Choose the desired height
 Ex.: 10 mm capsule in 1 Pcs Pack - CPJQSAA 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	045/06/08/10/11/125	3,08

Choose the desired height
 Ex.: 8 mm joint in 1 Pcs Pack - GIJQ 08/1



PROJOLLY SQUARE is a square corner bead profile in anodized and polished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles and also as separation profile for floor and wall coverings. Its particular section and elegance, the availability of special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY SQUARE

POLISHED ALUMINIUM




POLISHED ALUMINIUM thermo Packed (chrome- gold -titanium-copper)
bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSBC 045	4,5	9,49	25,62
PJQSBC 06	6	9,59	25,89
PJQSBC 08	8	9,68	26,14
PJQSBC 10	10	10,64	28,73
PJQSBC 11	11	11,32	30,56
PJQSBC 125	12,5	12,02	32,45
PJQSBO 08	8	9,68	26,14
PJQSBO 10	10	10,64	28,73
PJQSBO 125	12,5	12,02	32,45
PJQSB 06	6	9,59	25,89
PJQSB 08	8	9,68	26,14
PJQSB 10	10	10,64	28,73
PJQSB 125	12,5	12,02	32,45
PJQSBT 08	8	9,68	26,14
PJQSBT 10	10	10,64	28,73
PJQSBT 11	11	11,32	30,56
PJQSBT 125	12,5	12,02	32,45




POLISHED ALUMINIUM thermo Packed (black-grey gun) bar length 2,7 lm -
Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSB 08	8	12,45	33,62
PJQSB 10	10	13,17	35,56
PJQSB 11	11	13,59	36,69
PJQSB 125	12,5	14,05	37,94
PJQSBG 08	8	10,61	28,65
PJQSBG 10	10	11,74	31,70
PJQSBG 125	12,5	13,18	35,59

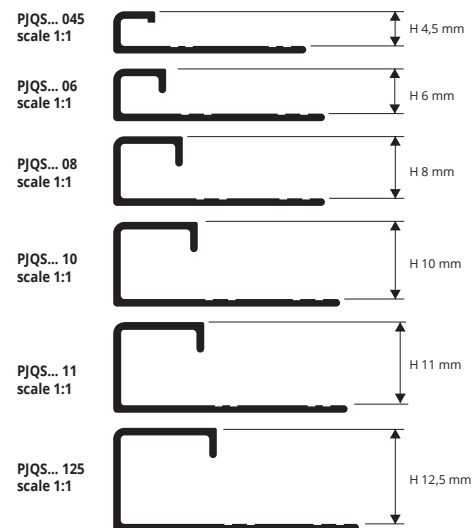

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

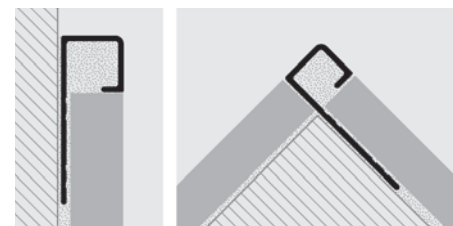

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

POLISHED					
BC - Pol. chrome alum.	BO - Pol. gold alum.	BR - Pol. copper alum.	BT - Pol. titanium alum.	BN - Pol. black alum.	BG - Pol. grey gun alum.

CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED ALUMINIUM / PLASTIC

CAPSULES and END CAPS - POLISHED ALUMINIUM

Article	H mm	€/Pc
CPJQSBC .../1	045/06/08/10/11/125	7,04
TPJQSBC .../1	045/06/08/10/11/125	3,32
CPJQSBO .../1	8/10/125	7,71
TPJQSBO .../1	8/10/125	3,32
CPJQSB 06/08/10/125	06/08/10/125	7,71
TPJQSB 06/08/10/125	06/08/10/125	3,32
CPJQSBT .../1	08/10/125	7,71
TPJQSBT .../1	08/10/125	3,32
CPJQSBN .../1	08/10/11/125	10,37
TPJQSBN .../1	08/10/11/125	3,32

CPJQSBG .../1	08/10/125	7,71
TPJQSBG .../1	08/10/125	3,32

Choose the desired height
Ex: 10 mm capsule in 1 Pcs Pack - CPJQSBC 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	045/06/08/10/11/125	3,08


Choose the desired height
Ex: 8 mm joint in 1 Pcs Pack - GIJQ 08/1




PROJOLLY SQUARE

BRUSHED POLISHED ALUMINIUM

PROJOLLY SQUARE is a square corner bead profile in brushed and tiltex aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles and also as separation profile for floor and wall coverings. Its particular section and elegance, the availability in numerous finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows an elegant workmanlike application.

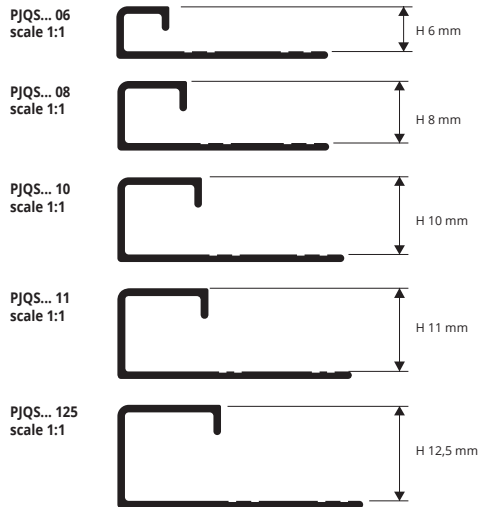

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

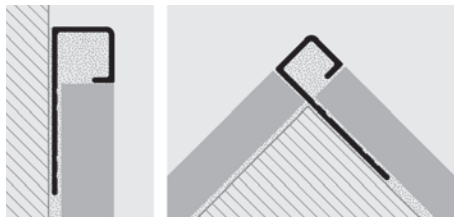

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



BRUSHED POLISHED ALUM. thermo Packed (silver-gold-copper titanium-black)
bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSBS 06	6	10,77	29,08
PJQSBS 08	8	10,90	29,43
PJQSBS 10	10	11,74	31,70
PJQSBS 11	11	12,45	33,62
PJQSBS 125	12,5	13,26	35,80
PJQSRS 08	8	10,90	29,43
PJQSRS 10	10	11,74	31,70
PJQSRS 125	12,5	13,26	35,80
PJQSTS 06	6	10,77	29,08
PJQSTS 08	8	10,90	29,43
PJQSTS 10	10	11,74	31,70
PJQSTS 11	11	12,45	33,62
PJQSTS 125	12,5	13,26	35,80
PJQSBOS 08	8	10,90	29,43
PJQSBOS 10	10	11,74	31,70
PJQSBOS 125	12,5	13,26	35,80
PJQSBRS 10	10	11,74	31,70
PJQSNS 08	8	14,18	38,29
PJQSNS 10	10	15,26	41,20
PJQSNS 11	11	16,20	43,74
PJQSNS 125	12,5	17,24	46,55



BRUSHED POLISHED ALUM. thermo Packed (grey gun)
bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSBGS 06	6	11,85	32,00
PJQSBGS 08	8	11,95	32,27
PJQSBGS 10	10	12,88	34,78
PJQSBGS 11	11	13,70	36,99
PJQSBGS 125	12,5	14,63	39,50

COLOURS

BRUSHED POLISHED		
BS - Br. polish, silver alum.	BOS - Br. polish, gold alum.	RS - Br. polish, copper alum.
TS - Br. polish, titanium alum.	NS - Br. polish, black alum.	BRAS - Br. polish, antique bronze alum.
BGS - Br. polish, grey gun alum.		

CAPSULES, END CAPS and THREE-WAYS JOINTS

BRUSHED POLISHED ALUMINIUM / PLASTIC

CAPSULES and END CAPS - BRUSHED POLISHED ALUMINIUM

Article	H mm	€/Pc
CPJQSBS .../1	06/08/10/11/125	7,71
TPJQSBS .../1	06/08/10/11/125	3,32
CPJQSRS .../1	08/10/125	7,71
TPJQSRS .../1	08/10/125	3,32
CPJQTS .../1	06/08/10/11/125	7,71
TPJQTS .../1	06/08/10/11/125	3,32
CPJQSBOS .../1	08/10/125	7,71
TPJQSBOS .../1	08/10/125	3,32
CPJQSBRS .../1	10	15,41
TPJQSBRS .../1	10	3,32
CPJQSNS .../1	08/10/11/125	7,71
TPJQSNS .../1	08/10/11/125	3,32

CPJQSBGS .../1	06/08/10/11/125	7,71
TPJQSBGS .../...	06/08/10/11/125	3,32

Choose the desired height.
Ex.: 10 mm capsule in 1 Pcs Pack - CPJQSBS 10/1



JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	045/06/08/10/11/125	3,08

PROJOLLY SQUARE is a square corner bead profile in brushed and tiltex aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles and also as separation profile for floor and wall coverings. Its particular section and elegance and special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY SQUARE

ANODIZED BRUSHED TILTEX ALUMINIUM




ANOD. BRUSHED TILTEX ALUM. thermo Packed (copper-titanium)
- bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSRX 08	8	13,76	37,15
PJQSRX 10	10	14,72	39,74
PJQSRX 125	12,5	16,29	43,98
PJQSTX 08	8	13,76	37,15
PJQSTX 10	10	14,72	39,74
PJQSTX 11	11	15,48	41,80
PJQSTX 125	12,5	16,29	43,98




ANOD. BRUSHED TILTEX ALUM. thermo Packed (silver)
- bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSBX 08	8	13,76	37,15
PJQSBX 10	10	14,72	39,74
PJQSBX 11	11	15,48	41,80
PJQSBX 125	12,5	16,29	43,98

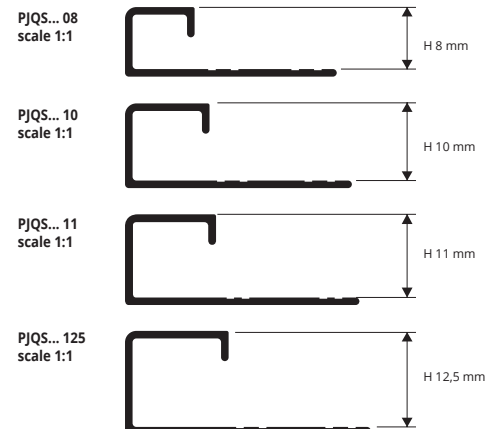

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

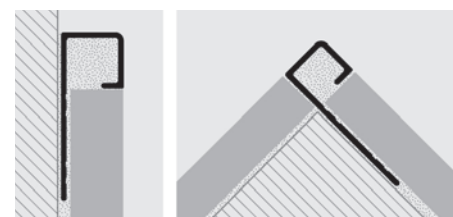

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS



CAPSULES, END CAPS and THREE-WAYS JOINTS

ANODIZED BRUSHED TILTEX ALUMINIUM / PLASTIC

CAPSULES and END CAPS - ANODIZED BRUSHED TILTEX ALUMINIUM

Article	H mm	€/Pc
CPJQSBX .../1	08/10/11/125	9,99
TPJQSBX .../1	08/10/11/125	3,32
CPJQSRX .../1	08/10/125	9,99
TPJQSRX .../1	08/10/125	3,32
CPJQSTX .../1	08/10/11/125	9,99
TPJQSTX .../1	08/10/11/125	3,32

Choose the desired height
Ex.: 10 mm capsule in 1 Pcs Pack - CPJQSBX 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	08/10/11/125	3,08




PROJOLLY SQUARE

ALUMINIUM STONE LINE, VARNISHED

NEWS
KALEIDOS

PROJOLLY SQUARE is a corner bead profile in powder coated aluminum that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and the availability of several finishes and special pieces such as internal and external corners, junctions and end caps make **PROJOLLY SQUARE** an elegant and much-sought after profile.

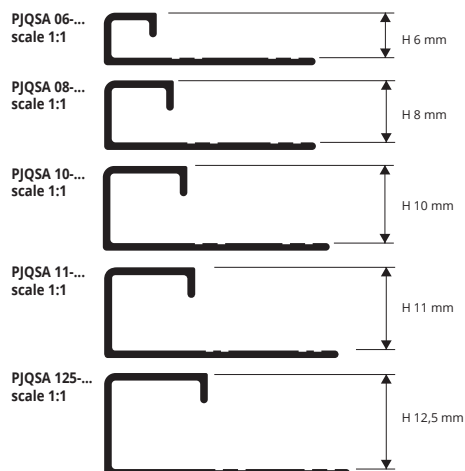

STONE LINE thermo Packed
bar length 2,7 lm - Pack 20 Pcs-54 lm

Article	H mm	€/lm	€/Pc
PJQSA 06-SL...	6	9,40	25,38
PJQSA 08-SL...	8	9,75	26,33
PJQSA 10-SL...	10	10,09	27,24
PJQSA 10-SL19	10	10,09	27,24
PJQSA 10-SL20	10	10,09	27,24
PJQSA 10-SL21	10	10,09	27,24
PJQSA 11-SL...	11	10,42	28,13
PJQSA 125-SL...	12,5	10,76	29,05


VARNISHED ALUMINIUM thermo Packed
bar length 2,7 lm - Pack 20 Pcs - 54 lm (white colour 40 Pcs-108 lm)

Article	H mm	€/lm	€/Pc
PJQSA 08-01	8	7,06	19,06
PJQSA 08-11	8	7,06	19,06
PJQSA 10-...	10	7,59	20,49
PJQSA 125-01	12,5	8,27	22,33
PJQSA 125-0106	12,5	8,27	22,33
PJQSA 125-11	12,5	8,27	22,33

ALUMINIUM EASY LINE
bar length 2,7 lm - Pack 20 Pcs-54 lm

Article	H mm	€/lm	€/Pc
PJQSA 10-EYP...	10	7,59	20,49
PJQSA 10-EY...	10	8,79	23,73

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

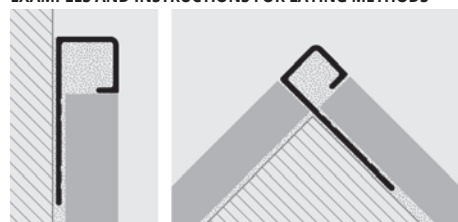

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

VARNISHED				
01 - White varnished aluminium (9016)	0106 - White ivory varnished aluminium (9001)	02 - Light grey varnished aluminium (7035)	11 - Black varnished aluminium (9005)	0211 - Varnished quartz grey alum. (7039)

KALEIDOS

STONE LINE						
SL01 - Stone white	SL02 - Stone cream	SL03 - Stone greyvory	SL04 - Stone sand	SL05 - Stone gray	SL06 - Stone cristal gray	SL07 - Stone antragray
SL08 - Stone antradark	SL09 - Stone bronze	SL10 - Stone corten	SL12 - Stone black	SL13 - Stone oyster grey	SL14 - Stone taupe grey	SL15 - Stone grey smoke
SL16 - Stone grey gun	SL17 - Stone tobacco	SL18 - Stone white cement				

STONE LINE - ONLY IN H10		
SL19 - Stone Sahara	SL20 - Stone Cement Grey	SL21 - Blue Grey

EASY LINE		
EYP01 - MATT white varnished (RAL 9016)	EYP11 - MATT black varnished	
EY151 - EASY Hazel Brown	EY006 - EASY Light Grey	EY007 - EASY Beige
EY008 - EASY Dark Grey	EY109 - EASY Warm Grey	EY110 - EASY Dark Beige

CAPSULES, END CAPS and THREE-WAYS JOINTS

ALUMINIUM STONE LINE AND VARNISHED ALUMINIUM / PLASTIC

CAPSULES and END CAPS - STONE LINE

Article	H mm	€/Pc
CPJQSA ...SL.../1	06/08/10/11/12,5	8,26
TPJQSA ...SL.../1	06/08/10/11/12,5	5,48
CPJQSA 10-SL19/1	10	8,26
TPJQSA 10-SL19/1	10	5,48
CPJQSA 10-SL20/1	10	8,26
TPJQSA 10-SL20/1	10	5,48
CPJQSA 10-SL21/1	10	8,26
TPJQSA 10-SL21/1	10	5,48

Choose the desired height
Ex.: 10 mm capsule in 1 Pcs Pack - CPJQSA 10-SL01/1

CAPSULES and END CAPS - VARNISHED

Article	H mm	€/Pc
CPJQSA 08-01/1	08	7,19
TPJQSA 08-01/1	08	3,32
CPJQSA 08-11/1	08	7,19
TPJQSA 08-11/1	08	3,32
CPJQSA 10-.../1	10	7,19
TPJQSA 10-.../1	10	3,32
CPJQSA 125-01/1	125	7,19
TPJQSA 125-01/1	125	3,32
CPJQSA 125-0106/1	125	7,19
TPJQSA 125-0106/1	125	3,32
CPJQSA 125-11/1	125	7,19
TPJQSA 125-11/1	125	3,32

Choose the desired height
Ex.: 10 mm capsule in 1 Pcs Pack - CPJQSA 10-03/1

CAPSULES and END CAPS - EASY LINE

Article	H mm	€/Pc
CPJQSA 10-EYP.../1	10	7,19
TPJQSA 10-EYP.../1	10	3,32
CPJQSA 10-EY.../1	10	7,19
TPJQSA 10-EY.../1	10	3,32

Choose the desired height
Ex.: 8 mm joint in 1 Pcs Pack
CPJQSA 10-EY001/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	06/08/10/11/125	3,08

JOINT



GIJQ ...

CAPSULE



CPJQSA .../1

END CAP



TPJQSA .../1

PROJOLLY SQUARE is a square corner bead profile in shockproof non - toxic colored vinyl resin that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section, the availability in different colours also on demand and special pieces such as internal and external corners make **PROJOLLY SQUARE** a much sought-after profile. It can be easily matched with the wall covering and that allows an elegant workmanlike application.

PROJOLLY SQUARE

SHOCKPROOF NON - TOXIC COLORED VINYL RESIN




NON-TOXIC SHOCKPROOF VINYL RESIN
bar length 2,7 lm - Pack 20 Pcs - 54 lm (white colour 40 Pcs-108 lm)

Article	H mm	€/lm	€/Pc
PJQ 06-01	6	1,36	3,67
PJQ 06-02	6	1,36	3,67
PJQ 08-01	8	1,42	3,83
PJQ 08-02	8	1,42	3,83
PJQ 08-06	8	1,42	3,83
PJQ 08-11	8	1,42	3,83
PJQ 08-12	8	1,42	3,83
PJQ 08-17	8	1,42	3,83
PJQ 08-18	8	1,42	3,83
PJQ 10-01	10	1,55	4,19
PJQ 10-0106	10	1,55	4,19
PJQ 10-03	10	1,55	4,19
PJQ 10-05	10	1,55	4,19
PJQ 10-06	10	1,55	4,19
PJQ 10-11	10	1,55	4,19
PJQ 10-12	10	1,55	4,19
PJQ 10-17	10	1,55	4,19
PJQ 10-18	10	1,55	4,19
PJQ 125-01	12,5	1,68	4,54
PJQ 125-05	12,5	1,68	4,54
PJQ 125-12	12,5	1,68	4,54
PJQ 125-17	12,5	1,68	4,54

The code of the selected colour must be added to the article code.
E.g.: PJQ 08-... (chosen colour white) PJQ 08-01.

COLOURS


01 - White	0106 - White ivory	02 - Light grey
03 - Cement gray	05 - Dark beige	06 - Ivory
11 - Black	12 - Silver	17 - Bahama beige
18 - Grey		

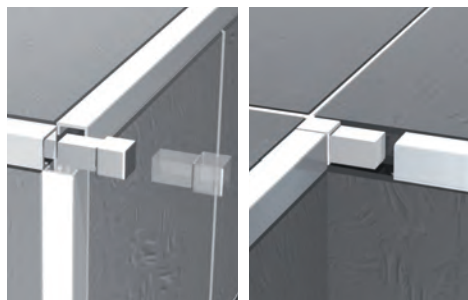


CAPSULES AND THREE-WAYS JOINTS
POLYPROPYLENE / POLYETHYLENE UV RESISTANT

Article	H mm	€/Pack 5 Pcs
CPJQ 06-01/5	6	6,83
IPJQ 06-01/5	6	6,83
CPJQ 06-02/5	6	6,83
IPJQ 06-02/5	6	6,83
CPJQ 08-01/5	8	6,95
IPJQ 08-01/5	8	6,95
CPJQ 08-02/5	8	6,95
IPJQ 08-02/5	8	6,95
CPJQ 08-06/5	8	6,95
IPJQ 08-06/5	8	6,95
CPJQ 08-11/5	8	6,95
IPJQ 08-11/5	8	6,95
CPJQ 08-12/5	8	6,95
IPJQ 08-12/5	8	6,95
CPJQ 08-17/5	8	6,95
IPJQ 08-17/5	8	6,95
CPJQ 08-18/5	8	6,95
IPJQ 08-18/5	8	6,95
CPJQ 10-01/5	10	7,12
IPJQ 10-01/5	10	7,12
CPJQ 10-0106/5	10	7,12
IPJQ 10-0106/5	10	7,12
CPJQ 10-03/5	10	7,12
IPJQ 10-03/5	10	7,12
CPJQ 10-05/5	10	7,12
IPJQ 10-05/5	10	7,12
CPJQ 10-06/5	10	7,12
IPJQ 10-06/5	10	7,12
CPJQ 10-11/5	10	7,12
IPJQ 10-11/5	10	7,12
CPJQ 10-12/5	10	7,12
IPJQ 10-12/5	10	7,12
CPJQ 10-17/5	10	7,12
IPJQ 10-17/5	10	7,12
CPJQ 10-18/5	10	7,12
IPJQ 10-18/5	10	7,12
CPJQ 125-05/5	125	8,01
IPJQ 125-05/5	125	8,01
CPJQ 125-12/5	125	8,01
IPJQ 125-12/5	125	8,01
CPJQ 125-17/5	125	8,01
IPJQ 125-17/5	125	8,01

The code of the selected colour must be added to the article code.
E.g.: CPJQ 08-.../5 (chosen colour white) CPJQ 08-01/5.
IPJQ 08-.../5 (chosen colour white) IPJQ 08-01/5.

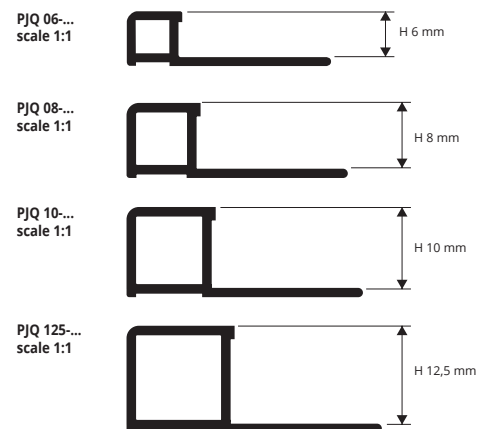

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

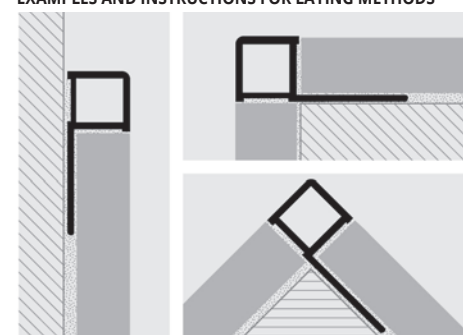

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired colour. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

INTERNAL CAPSULES



IPJQ ...-.../5

EXTERNAL CAPSULES



CPJQ ...-.../5