


PROJOLLY QUART

POLISHED, SUPER POLISHED AND BRUSHED STAINLESS STEEL AISI 304/1.4301-V2A

PROJOLLY QUART is a quarter-circle rounded bead profile in polished, super polished and brushed stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and special pieces such as internal and external corners, end caps and joints make **PROJOLLY QUART** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

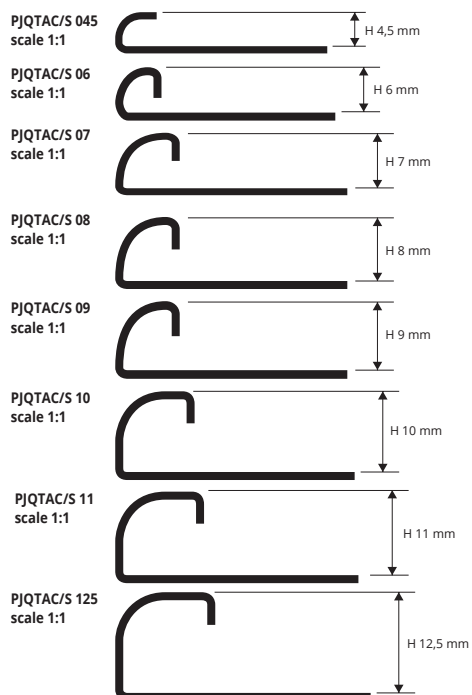

EXAMPLES FOR LAYING METHODS



POLISHED STAINLESS STEEL AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 20 Pcs - 54 lm (H 4,5 mm - 108 lm) - 10/10 mm

Article	H mm	€/lm	€/Pc
PJQTAC 045	4,5	10,93	29,51
PJQTAC 06	6	11,91	32,16
PJQTAC 07	7	12,31	33,24
PJQTAC 08	8	12,70	34,29
PJQTAC 09	9	13,18	35,59
PJQTAC 10	10	13,68	36,94
PJQTAC 11	11	14,21	38,37
PJQTAC 125	12,5	14,67	39,61

SUPER POLISHED STAINLESS STEEL AISI 304/1.4301-V2A thermo packed
bar length 2,7 lm - pack. 20 Pcs 54 lm (H 4,5 mm - 108 ml) - 10/10 mm

Article	H mm	€/lm	€/Pc
PJQTACML 08	8	15,66	42,28
PJQTACML 10	10	16,64	44,93
PJQTACML 125	12,5	17,56	47,41



Brushed STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 20 Pcs - 54 lm (H 4,5 mm - 108 lm) - 10/10 mm

Article	H mm	€/lm	€/Pc
PJQTACS 045	4,5	13,75	37,13
PJQTACS 06	6	14,27	38,53
PJQTACS 07	7	14,74	39,80
PJQTACS 08	8	15,12	40,82
PJQTACS 09	9	15,67	42,31
PJQTACS 10	10	16,18	43,69
PJQTACS 11	11	16,66	44,98
PJQTACS 125	12,5	17,04	46,01

COLOURS

AC - Polished stainless st. AISI 304/1.4301-V2A	ACML - Super polished stainless st. AISI 304/1.4301-V2A	ACS - Brushed stainless st. AISI 304/1.4301-V2A

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

INSTRUCTIONS FOR LAYING METHODS

1. Choose "PROJOLLY QUART" according to the tile thickness and desired finish. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED, SUPER POLISHED AND BRUSHED STAINLESS ST. AISI 304/1.4301-V2A / PLASTIC

CAPSULES and END CAPS - POLISHED STAINLESS ST. AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJQTAC 045/1	4,5	15,76
IPJQTAC 045/1	4,5	15,76
CPJQTAC 06/1	6	16,77
IPJQTAC 06/1	6	16,77
CPJQTAC 07/1	7	16,92
IPJQTAC 07/1	7	16,92
CPJQTAC 08/1	8	17,07
IPJQTAC 08/1	8	17,07
CPJQTAC 09/1	9	17,25
IPJQTAC 09/1	9	17,25
CPJQTAC 10/1	10	17,43
IPJQTAC 10/1	10	17,43
CPJQTAC 11/1	11	18,10
IPJQTAC 11/1	11	18,10
CPJQTAC 125/1	12,5	18,78
IPJQTAC 125/1	12,5	18,78
TPJQTAC 045-06-08-10-11-125/1		3,32

CAPSULES and END CAPS - BRUSHED STAINLESS ST. AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJQTACS 045/1	4,5	18,10
IPJQTACS 045/1	4,5	18,10
CPJQTACS 06/1	6	18,44
IPJQTACS 06/1	6	18,44
CPJQTACS 07/1	7	18,64
IPJQTACS 07/1	7	18,64
CPJQTACS 08/1	8	18,78
IPJQTACS 08/1	8	18,78
CPJQTACS 09/1	9	18,96
IPJQTACS 09/1	9	18,96
CPJQTACS 10/1	10	19,11
IPJQTACS 10/1	10	19,11
CPJQTACS 11/1	11	19,62
IPJQTACS 11/1	11	19,62
CPJQTACS 125/1	12,5	20,12
IPJQTACS 125/1	12,5	20,12
TPJQTACS 045-06-08-10-11-125/1		3,32

CAPSULES - SUPER POLISHED STAINLESS ST. AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJQTACML 08/1	8	18,78
IPJQTACML 08/1	8	18,78
CPJQTACML 10/1	10	19,11
IPJQTACML 10/1	10	19,11
CPJQTACML 125/1	12,5	20,12
IPJQTACML 125/1	12,5	20,12

EXTERNAL CAPSULES CPJQT...../1



END CAPS
TPJQT...../1



INTERNAL CAPSULES IPJQT...../1



JOINT
GIJQT...



JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQT 045	4,5	3,08
GIJQT 06	6	3,08
GIJQT 07	7	3,08
GIJQT 08	8	3,08
GIJQT 09	9	3,08
GIJQT 10	10	3,08
GIJQT 11	11	3,08
GIJQT 125	12,5	3,08

PROJOLLY QUART is a quarter-circle rounded bead profile in natural, antique brass, polished varnished and chromed brass that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like (only natural and chromed version) a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and special pieces such as internal and external corners, end caps and joints make **PROJOLLY QUART** a much sought-after and elegant profile that allows a workmanlike application.

PROJOLLY QUART

NATURAL, POLISHED VARNISHED, CHROMED AND ANTIQUE BRASS



NATURAL BRASS thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQTON 08	8	18,03	48,68
PJQTON 10	10	19,06	51,46
PJQTON 125	12,5	20,55	55,49



ANTIQU BRASS thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQTOB 10	10	39,14	105,68
PJQTOB 125	12,5	42,23	114,02

PJQT... 08
scale 1:1



PJQT... 10
scale 1:1



PJQT... 125
scale 1:1



SUPER POLISHED VARNISHED CHROMED BRASS
thermo packed bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQTOC 10	10	30,39	82,05
PJQTOC 125	12,5	32,96	88,99


MIRROR LINE



POLISHED VARNISHED BRASS thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQTOL 10	10	26,27	70,93
PJQTOL 125	12,5	29,61	79,95

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

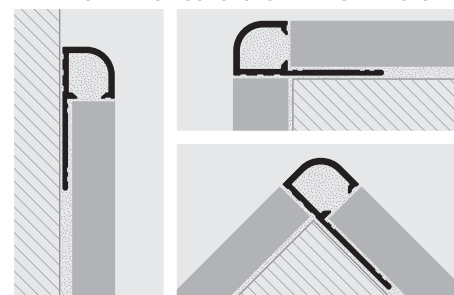

1. Choose "PROJOLLY QUART" according to the tile thickness and desired finish. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

Polished varnished brass is not suitable for frequent pedestrian traffic places and/or scratching.

COLOURS

ON - Natural brass	OL - Polished brass	OC - Chromed brass
OB - Antique brass		

CAPSULES, END CAPS and THREE-WAYS JOINTS

NATURAL, POLISHED, ANTIQUE, CHROMED BRASS / PLASTIC

CAPSULES & END CAPS - CHROMED BRASS

Article	H mm	€/Pc
CPJQTOC .../1	10/125	23,00
IPJQTOC .../1	10/125	26,00
TPJQTOC .../1	10/125	3,75

Choose the desired height:
E.g.: CPJQTOC.../1 (Pack. 1 pz)

CAPSULES & END CAPS - ANTIQUE BRASS

Article	H mm	€/Pc
CPJQTOB .../1	10/125	31,50
IPJQTOB .../1	10/125	35,50

Choose the desired height:
E.g.: CPJQTOB .../1 (Pack. 1 pz)

CAPSULES & END CAPS - POLISHED BRASS

Article	H mm	€/Pc
CPJQTOL .../1	10/125	23,00
IPJQTOL .../1	10/125	26,00

Choose the desired height:
E.g.: CPJQTOL.../1 (Pack. 1 pz)

CAPSULES & END CAPS - NATURAL BRASS

Article	H mm	€/Pc
CPJQTON .../1	08/10/125	14,85
IPJQTON .../1	08/10/125	14,85

Choose the desired height:
E.g.: CPJQTON.../1 (Pack. 1 pz)

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQT ...	06/08/10/125	3,08

EXTERNAL CAPSULES CPJQT... .../...



INTERNAL CAPSULES IPJQT... .../...



END CAP TPJQT... .../...



JOINT GIJQT...





PROJOLLY QUART is a quarter-circle rounded bead profile in anodized and polished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles. Its particular section and elegance, the special pieces such as internal and external corners, end caps and joints make **PROJOLLY QUART** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY QUART

ANODIZED ALUMINIUM



ANODIZED ALUMINIUM (silver-titanium-gold-antique bronze) thermo packed bar length 2,7 lm - pack. 40 Pcs - 108 lm (H 12,5 mm, 15 mm - pack. 20 Pcs)

Article	H mm	€/lm	€/Pc
PJTAA 06	6	5,40	14,58
PJTAA 08	8	5,74	15,50
PJTAA 10	10	6,19	16,71
PJTAA 11	11	6,88	18,58
PJTAA 125	12,5	6,98	18,85
PJTAA 15	15	7,80	21,06
PJTAO 10	10	6,19	16,71
PJTAO 125	12,5	6,98	18,85
PJTAT 08	8	6,33	17,09
PJTAT 10	10	6,88	18,58
PJTAT 125	12,5	7,75	20,93
PJTBRA 10	10	10,99	29,67



ANODIZED ALUMINIUM (black-grey gun) thermo packed bar length 2,7 lm - pack. 40 Pcs - 108 lm (H 12,5 mm, 15 mm - pack. 20 Pcs)

Article	H mm	€/lm	€/Pc
PJTNEO 10	10	8,29	22,38
PJTNEO 11	11	9,22	24,89
PJTNEO 125	12,5	9,37	25,30
PJTAG 10	10	7,52	20,30

PJQT... 06
scale 1:1



PJQT... 08
scale 1:1



PJQT... 10
scale 1:1




AVAILABLE PJQT... 11 - H 11MM

PJQT... 125
scale 1:1



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

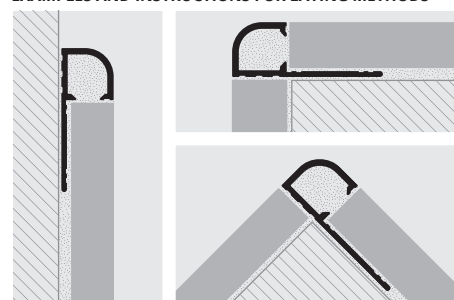

1. Choose "PROJOLLY QUART" according to the tile thickness and desired finish. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

ANODIZED					
AA - Anodized silver alum.	BRA - Anod. antique bronze alum.	AO - Anod. gold alum.	AT - Anod. titanium alum.	NEO - Anod. black alum.	AG - Anod. grey gun alum.

CAPSULES, END CAPS and THREE-WAYS JOINTS

ANODIZED, POLISHED ALUMINIUM / PLASTIC

CAPSULES and END CAPS - ANODIZED ALUMINIUM

Article	H mm	€/Pc
CPJTAA .../1	06/08/10/11/125/15	6,85
IPJTAA .../1	06/08/10/11/125/15	6,85
TPJTAA .../1	06/08/10/11/125/15	3,32
CPJTAO .../1	10/125	6,85
IPJTAO .../1	10/125	6,85
TPJTAO .../1	10/125	3,32
CPJTAT .../1	08/10/125	7,38
IPJTAT .../1	08/10/125	7,38
TPJTAT .../1	08/10/125	3,32
CPJTBRA .../1	10	7,38
IPJTBRA .../1	10	7,38
TPJTBRA .../1	10	3,32

Choose the desired height:
Ex.: 4,5 mm capsule in 1 Pcs Pack - CPJTAA 10/1


CAPSULES and END CAPS - ANODIZED ALUMINIUM

Article	H mm	€/Pc
CPJTNEO .../1	10/11/125	9,21
IPJTNEO .../1	10/11/125	9,21
TPJTNEO .../1	10/11/125	3,32
CPJTAG .../1	10	7,38
IPJTAG .../1	10	7,38
TPJTAG .../1	10	3,32

Choose the desired height:
Ex.: 4,5 mm capsule in 1 Pcs Pack - CPJTAA 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQT...	06/08/10/11/125/15	3,08

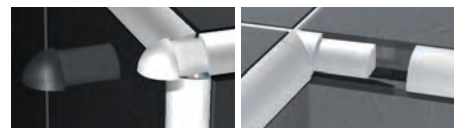

EXTERNAL CAPSULES
CPJQT... .../1

INTERNAL CAPSULES
IPJQT... .../1



END CAP
TPJQT... .../1




JOINT
GIJQT...




PROJOLLY QUART

POLISHED ALUMINIUM

PROJOLLY QUART is a quarter-circle rounded bead profile in anodized and polished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles. Its particular section and elegance and special pieces such as internal and external corners, end caps and joints make **PROJOLLY QUART** a much sought-after profile that allows an elegant workmanlike application.

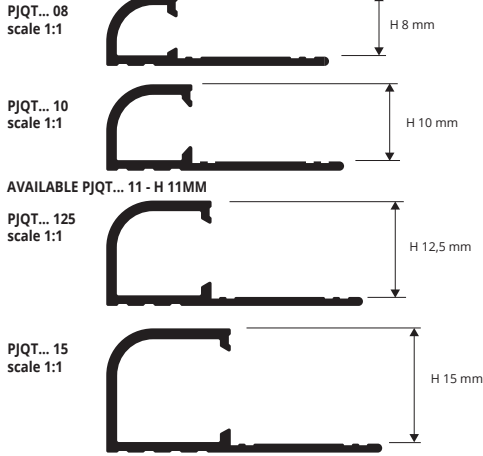

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

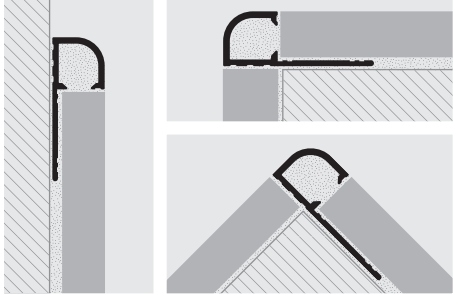

1. Choose "PROJOLLY QUART" according to the tile thickness and desired finish. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



POLISHED ALUMINIUM (chrome-titanium-gold) thermo packed - bar length 2,7 lm
- pack. 40 Pcs - 108 lm (H 15 mm - 54 lm) - (H 12,5 mm, 15 mm - pack. 20 Pcs)

Article	H mm	€/lm	€/Pc
PJQTBC 08	8	9,47	25,57
PJQTBC 10	10	10,51	28,38
PJQTBC 11	11	11,17	30,16
PJQTBC 125	12,5	11,87	32,05
PJQTBC 15	15	12,34	33,32
PJQTBO 08	8	9,47	25,57
PJQTBO 10	10	10,51	28,38
PJQTBO 125	12,5	11,87	32,05
PJQBT 10	10	10,51	28,38



POLISHED ALUMINIUM (chrome-titanium-gold) thermo packed - bar length 2,7 lm
- pack. 40 Pcs - 108 lm (H 15 mm - 54 lm) - (H 12,5 mm, 15 mm - pack. 20 Pcs)

Article	H mm	€/lm	€/Pc
PJQTBN 08	8	12,26	33,10
PJQTBN 10	10	12,88	34,78
PJQTBG 10	10	11,54	31,16

COLOURS

POLISHED				
BC - Polished chrome alum.	BO - Polished gold alum.	BT - Polished titanium alum.	BN - Polished black alum.	BG - Polished grey gun alum.

CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED ALUMINIUM / PLASTIC

CAPSULES and END CAPS - POLISHED ALUMINIUM

Article	H mm	€/Pc
CPJQTBC .../1	08/10/11/125/15	6,85
IPJQTBC .../1	08/10/11/125/15	6,85
TPJQTBC .../1	08/10/11/125/15	3,32
CPJQTBO .../1	08/10/125	6,85
IPJQTBO .../1	08/10/125	6,85
TPJQTBO .../1	08/10/125	3,32
CPJQBTB 10/1	10	7,38
IPJQBTB 10/1	10	7,38
TPJQBTB 10/1	10	3,32


Choose the desired height:
Ex.: 4,5 mm capsule in 1 Pcs Pack - CPJQTBC 10/1

CAPSULES and END CAPS - POLISHED ALUMINIUM

Article	H mm	€/Pc
CPJQTBN 08/1	08	6,85
IPJQTBN 08/1	08	6,85
TPJQTBN 08/1	08	3,32
CPJQTBN 10/1	10	6,85
IPJQTBN 10/1	10	6,85
TPJQTBN 10/1	10	3,32
CPJQTBG 10/1	10	6,85
IPJQTBG 10/1	10	6,85
TPJQTBG 10/1	10	3,32

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQT...	06/08/10/ 11/125/15	3,08

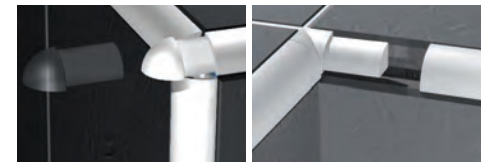

EXTERNAL CAPSULES
CPJQT... .../1



END CAP
TPJQT... .../1



INTERNAL CAPSULES
IPJQT... .../1



JOINT
GIJQT...



PROJOLLY QUART is a quarter-circle rounded bead profile in brushed and varnished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and (only brushed version) like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles. Its particular section and elegance, the availability of special pieces such as internal and external corners, end caps and joints make **PROJOLLY QUART** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY QUART

BRUSHED POLISHED, BRUSHED AND VARNISHED ALUMINIUM



BRUSHED POLISHED ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm (H 12,5 mm, 15 mm - pack. 20 Pcs)

Article	H mm	€/lm	€/Pc
PJQTBS 08	8	10,90	29,43
PJQTBS 10	10	11,87	32,05
PJQTBS 125	12,5	13,26	35,80
PJQTRS 10	10	11,85	32,00
PJQTRS 125	12,5	13,24	35,75
PJQTTS 08	8	10,87	29,35
PJQTTS 10	10	11,85	32,00
PJQTTS 125	12,5	13,24	35,75
PJQTNS 10	10	15,04	40,61
PJQTBS 10	10	13,08	35,32




VARNISHED ALUMINIUM thermo packed - bar length 2,7 M
pack. 20 Pcs - 54 lm (white colour 40 Pcs - 108 lm)

Article	H mm	€/lm	€/Pc
PJQTA 06-01	6	6,21	16,77
PJQTA 08-01	8	6,91	18,66
PJQTA 10-01	10	7,48	20,20
PJQTA 11-01	11	7,75	20,93
PJQTA 125-01	12,5	8,01	21,63


BRUSHED ANTIQUE BRONZE ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pc - 108 lm (H 12,5 mm, 15 mm - pack. 20 Pcs)

Article	H mm	€/lm	€/Pc
PJQTBRAS 10	10	10,99	29,67
PJQTBRAS 125	12,5	11,96	32,29

BRAS - ITEM AVAILABLE WHILE STOCKS LAST.

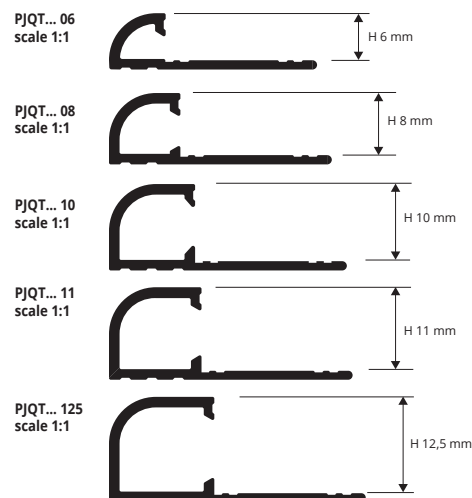

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

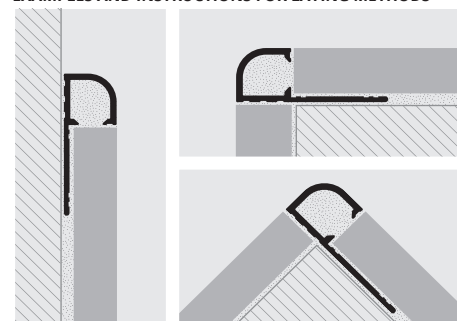

1. Choose "PROJOLLY QUART" according to the tile thickness and desired finish. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

BRUSHED				VARNISHED
BS - Brushed polished silver aluminium	BRAS - Brushed antique bronze alum.	TS - Brushed Titanium alum.	NS - Brushed black alum.	BGS - Brushed Polished Grey gun
				01 - Varnished white alum. (9016)
RS - Br. polish, copper alum.				

CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED BRUSHED, VARNISHED ALUMINIUM/ PLASTIC

CAPSULES & CAPS - POLISHED BRUSHED ALUMINIUM

Article	H mm	€/Pc
CPJQTBS .../1	08/10/125	7,71
IPJQTBS .../1	08/10/125	7,71
TPJQTBS .../1	08/10/125	3,32
CPJQTTS .../1	08/10/125	9,21
IPJQTTS .../1	08/10/125	9,21
TPJQTTS .../1	08/10/125	3,81
CPJQTBS 10/1	10	7,71
IPJQTBS 10/1	10	7,71
TPJQTBS 10/1	10	3,32
CPJQTRS .../1	10/125	9,21
IPJQTRS .../1	10/125	9,21
TPJQTRS .../1	10/125	3,81
CPJQTNS 10/1	10	9,21
IPJQTNS 10/1	10	9,21
TPJQTNS 10/1	10	3,81

Choose the desired height:
Ex.: 4,5 mm capsule in 1 Pcs Pack - CPJQTBS 10/1

CAPSULES & CAPS - POLISHED BRUSHED ALUMINIUM

Article	H mm	€/Pc
CPJQTBRAS .../1	10/125	7,71
IPJQTBRAS .../1	10/125	7,71
TPJQTBRAS .../1	10/125	3,32

CAPSULES & CAP - VARNISHED ALUMINIUM

Article	H mm	€/Pc
CPJQTA ...-01/1	06/08/10/11/125	7,02
IPJQTA ...-01/1	06/08/10/11/125	7,02
TPJQTA ...-01/1	06/08/10/11/125	3,05

JOINTS - PLASTIC


Article	H mm	€/Pc
GIJQT...	06/08/10/11/125	3,08

EXTERNAL CAPSULES



CPJQT... .../1

INTERNAL CAPSULES



IPJQT... .../1

END CAP




TPJQT... .../1

JOINT



GIJQT...

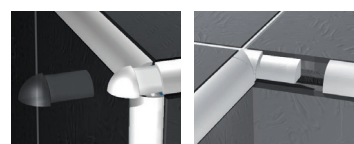




NEWS
KALEIDOS

PROJOLLY QUART is a quarter-circle rounded bead profile in powder coated aluminum that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and the availability of numerous finishes Kaleidos and special pieces such as internal and external corners, junctions and end caps make **PROJOLLY QUART** an elegant and much-sought after profile.

PROJOLLY QUART

STONE LINE ALUMINIUM

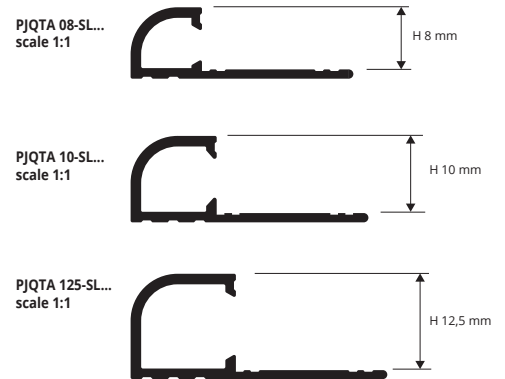

STONE LINE ALUMINIUM thermo packed
bar length 2,7 M - pack. 20 Pcs - 54 lm


Article	H mm	€/lm	€/Pc
PJQTA 08-SL...	8	9,07	24,49
PJQTA 10-SL...	10	9,40	25,38
PJQTA 125-SL...	12,5	10,09	27,24

The code of the selected colour must be added to the article code.
E.g.: PJQTA 08... (chosen colour stone white) PJQTA 08-SL01.

COLOURS KALEIDOS®

STONE LINE						
SL01 - Stone white	SL02 - Stone cream	SL03 - Stone greyvory	SL04 - Stone sand	SL05 - Stone gray	SL06 - Stone cristal gray	SL07 - Stone antragray
SL08 - Stone antradark	SL09 - Stone bronze	SL10 - Stone corten	SL12 - Stone black	SL13 - Stone oyster grey	SL14 - Stone taupe grey	SL15 - Stone grey smoke
SL16 - Stone grey gun	SL17 - Stone tobacco	SL18 - Stone white cement				

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

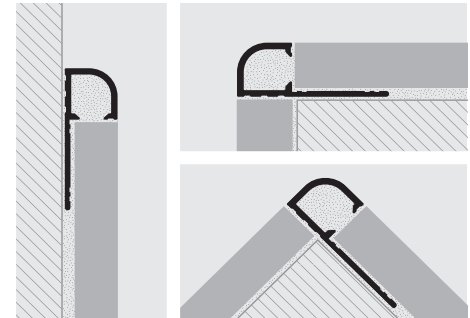

1. Choose "PROJOLLY QUART" according to the tile thickness and desired finish. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS and THREE-WAYS JOINTS

STONE LINE ALUMINIUM / PLASTIC


JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQT...	08/10/125	3,08

CAPSULES & CAP - STONE LINE ALUMINIUM

Article	H mm	€/Pc
CPJQTA ...-SL.../1	08/10/125	8,26
IPJQTA ...-SL.../1	08/10/125	8,26
TPJQTA ...-SL.../1	08/10/125	5,47

Choose the desired height:
Ex.: 08 mm capsule in 1 Pcs Pack - CPJQTA 08-SL06/1

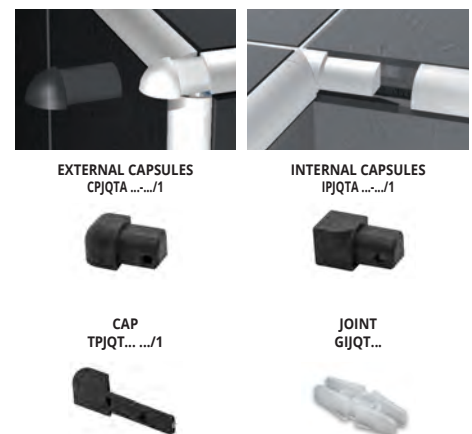

EXTERNAL CAPSULES
CPJQTA ...-SL.../1

INTERNAL CAPSULES
IPJQTA ...-SL.../1


CAP
TPJQT... .../1

JOINT
GIJQT...


PROJOLLY QUART

SHOCKPROOF NON - TOXIC COLORED VINYL RESIN

PROJOLLY QUART is a quarter-circle rounded bead profile in shockproof non - toxic colored vinyl resin that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and special pieces such as internal and external corners make **PROJOLLY QUART** a much sought-after profile. It can be easily matched with the wall covering and allows an elegant workmanlike application.

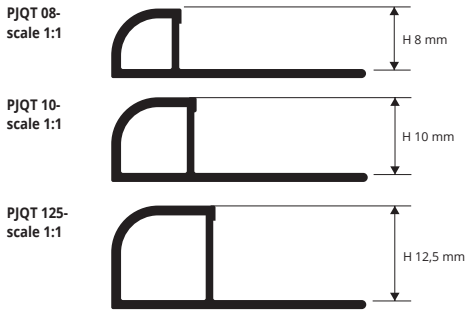

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

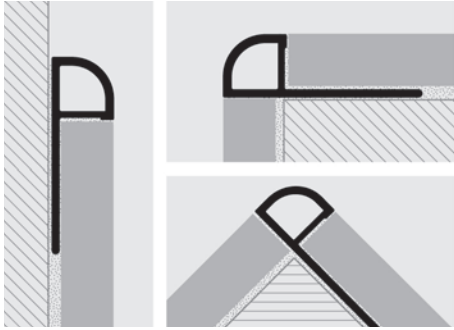

1. Choose "PROJOLLY QUART" according to the tile thickness and desired colour. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation.



NON-TOXIC SHOCKPROOF VINYL RESIN
bar length 2,7 lm - pack. 54 lm (white colour pack. 108 lm)

Article	H mm	€/lm	€/Pc
PJQT 08-01	8	1,42	3,83
PJQT 08-02	8	1,42	3,83
PJQT 08-03	8	1,42	3,83
PJQT 08-17	8	1,42	3,83
PJQT 08-18	8	1,42	3,83
PJQT 10-...	10	1,55	4,19
PJQT 125-01	12,5	1,68	4,54
PJQT 125-02	12,5	1,68	4,54
PJQT 125-03	12,5	1,68	4,54
PJQT 125-06	12,5	1,68	4,54
PJQT 125-11	12,5	1,68	4,54


The code of the selected colour must be added to the article code.
E.g.: PJQT 08-... (chosen colour white) PJQT 08-01.

COLOURS

00 - White ice	01 - White	02 - Light grey	03 - Cement gray	05 - Dark beige	06 - Ivory
11 - Black	17 - Bahama beige	18 - Grey			

CAPSULES and THREE-WAYS JOINTS

POLYPROPYLENE/POLYETHYLENE UV RESISTANT

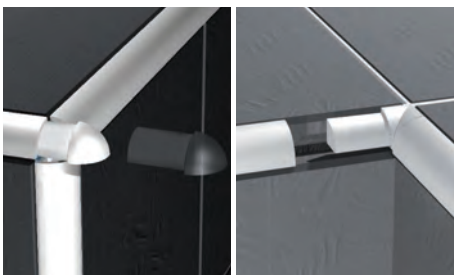

EXTERNAL CAPSULES



CPJQT ...-.../5

INTERNAL CAPSULES



IPJQT ...-.../5

POLYPROPYLENE/POLYETHYLENE UV RESISTANT

Article	H mm	€/Pack. 5 Pcs
CPJQT 08-01/5	8	6,77
IPJQT 08-01/5	8	6,77
CPJQT 08-02/5	8	6,77
IPJQT 08-02/5	8	6,77
CPJQT 08-03/5	8	6,77
IPJQT 08-03/5	8	6,77
CPJQT 08-17/5	8	6,77
IPJQT 08-17/5	8	6,77
CPJQT 08-18/5	8	6,77
IPJQT 08-18/5	8	6,77
CPJQT 10-.../5	10	6,91
IPJQT 10-.../5	10	6,91
CPJQT 125-01/5	12,5	7,17
IPJQT 125-01/5	12,5	7,17
CPJQT 125-02/5	12,5	7,17
IPJQT 125-02/5	12,5	7,17
CPJQT 125-03/5	12,5	7,17
IPJQT 125-03/5	12,5	7,17
CPJQT 125-06/5	12,5	7,17
IPJQT 125-06/5	12,5	7,17
CPJQT 125-11/5	12,5	7,17
IPJQT 125-11/5	12,5	7,17



The code of the selected colour must be added to the article code. E.g.:
CPJQT 08-.../5 (chosen colour white) CPJQT 08-01/5.

PROJOLLY is a rounded bead profile in polished and brushed stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

PROJOLLY

POLISHED AND BRUSHED STAINLESS STEEL
AISI 304/1.4301-V2A




POLISHED STAINLESS STEEL AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PJAC 06	6	11,85	32,00
PJAC 08	8	12,63	34,10
PJAC 10	10	13,62	36,77
PJAC 11	11	14,19	38,31
PJAC 125	12,5	14,61	39,45
PJAC 15	15	16,30	44,01




BRUSHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PJACS 06	6	14,20	38,34
PJACS 08	8	15,00	40,50
PJACS 10	10	16,06	43,36
PJACS 11	11	16,59	44,79
PJACS 125	12,5	16,97	45,82
PJACS 15	15	18,67	50,41

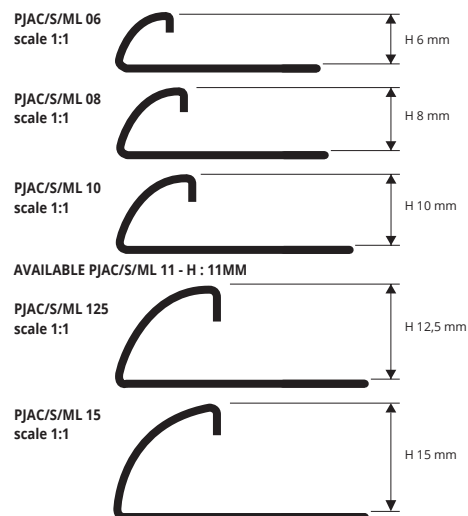

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

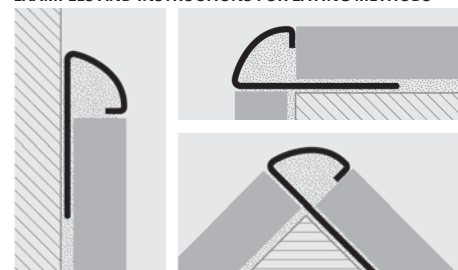

1. Choose "PROJOLLY" according to the tile thickness and desired finish. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

COLOURS



CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED, SUPER POLISHED AND BRUSHED STAINLESS ST. AISI 304/1.4301-V2A / PLASTIC

CAPSULES and END CAPS - POLISHED STAINLESS ST. AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJAC 06/1	6	16,10
IPJAC 06/1	6	16,10
CPJAC 08/1	8	16,77
IPJAC 08/1	8	16,77
CPJAC 10/1	10	17,43
IPJAC 10/1	10	17,43
CPJAC 11/1	11	18,10
IPJAC 11/1	11	18,10
CPJAC 125/1	12,5	18,78
IPJAC 125/1	12,5	18,78
CPJAC 15/1	15	20,46
IPJAC 15/1	15	20,46
TPJAC 06-08-10-11-125-15-.../1		3,32

Choose the desired height:
E.g.:

CPJAC .../1 (Pack 1 Pcs)

CAPSULES and END CAPS - BRUSHED STAINLESS ST. AISI 304/1.4301-V2A


Article	H mm	€/Pc
CPJACS 06/1	6	16,77
IPJACS 06/1	6	16,77
CPJACS 08/1	8	17,43
IPJACS 08/1	8	17,43
CPJACS 10/1	10	18,44
IPJACS 10/1	10	18,44
CPJACS 11/1	11	19,29
IPJACS 11/1	11	19,29
CPJACS 125/1	12,5	20,12
IPJACS 125/1	12,5	20,12
CPJACS 15/1	15	21,80
IPJACS 15/1	15	21,80
TPJACS 06-08-10-11-125-15-.../1		3,32

Choose the desired height:
E.g.:

CPJACS .../1 (Pack 1 Pcs)

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJAC 06	6	3,08
GIJAC 08	8	3,08
GIJAC 10	10	3,08
GIJAC 11	11	3,08
GIJAC 125	12,5	3,08
GIJAC 15	15	3,08

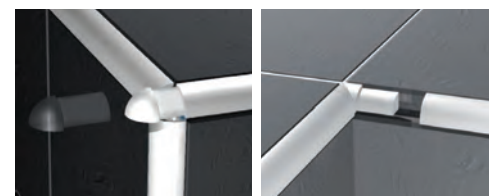

PROJOLLY

POLISHED STAINLESS STEEL INOX AISI 316LL/1.4404-V4A

PROJOLLY is a rounded bead profile in polished stainless steel INOX AISI 316LL/1.4404-V4A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section, the availability in three different finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical and chemical stresses.

PJACM 06
scale 1:1



PJACM 08
scale 1:1



PJACM 10
scale 1:1




AVAILABLE PJACM 11 - H : 11MM

PJACM 125
scale 1:1



EXAMPLES OF LAYING

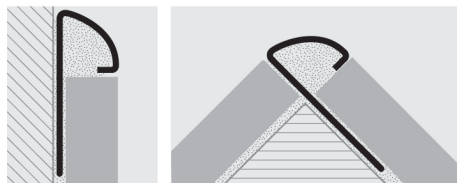

1. Choose "PROJOLLY" according to the tile thickness. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



POLISHED STAINLESS STEEL AISI 316LL/1.4404-V4A
with protective film

- bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm



Article	H mm	€/lm	€/Pc
PJACM 06	6	14,87	40,15
PJACM 08	8	15,99	43,17
PJACM 10	10	17,16	46,33
PJACM 11	11	17,88	48,28
PJACM 125	12,5	18,30	49,41

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

COLOURS



ACM - Polished stainless st.
AISI 316LL

CAPSULES and THREE-WAYS JOINTS

POLISHED STAINLESS STEEL AISI 316LL/1.4404-V4A



POLISHED STAINLESS STEEL AISI 316LL/1.4404-V4A

Article	H mm	€/Pc
CPJACM 06/1	6	18,44
IPJACM 06/1	6	18,44
CPJACM 08/1	8	19,11
IPJACM 08/1	8	19,11
CPJACM 10/1	10	20,12
IPJACM 10/1	10	20,12
CPJACM 11/1	11	20,80
IPJACM 11/1	11	20,80
CPJACM 125/1	12,5	21,46
IPJACM 125/1	12,5	21,46

Choose the desired height:
E.g.: CPJACM .../1 (Pack. 1 Pcs)

EXTERNAL CAPSULES



CPJACM .../1

INTERNAL CAPSULES



IPJACM .../1

